

# Technical Manual FOUR – CHANNEL LIMIT TYPE 681

## Doc. Ref CD2006M

This manual applies to units of mod status 1 ONWARDS





of Conformity

USA & Canada RDP Electrosense Inc.

2216 Pottstown Pike
Pottstown, PA 19465
U.S.A.
Tel (610) 469-0850
Fax (610) 469-0852
E-mail info@rdpe.com
www.rdpe.com

All other countries

RDP Electronics Ltd

Grove Street, Heath Town, Wolverhampton, WV10 0PY United Kingdom

Tel: +44 (0) 1902 457512

E-mail: <u>sales@rdpe.com</u> www.rdpe.com

## **INDEX**

1.	INTRODUCTION	3
1.1 1.2	BEFORE POWERING-UP, CHECK Information on Conformity to EC Directives	
2.	CONNECTION DETAILS	4
3.	FRONT PANEL CONTROLS	6
3.1 3.2 3.3 3.4	LED 1-4 Level Potentiometers 1-4 Level Selector Switch Reset Switch	6 6
4.	INTERNAL CONTROLS (FOR LOCATION, REFER TO FIG.2)	7
4.1 4.2 4.3 4.4 4.5 4.6	Polarity Switches (SW 1-4) Hysteresis Links (J1-J4) Latching Link (J1-J4 Relay Mode Switches (SW 5-8) Output Links SP 1-4 Channel Number (Address) Switch (SW7)	7 7 7 7
5.	SETTING-UP PROCEDURE	9
6.	SPECIFICATION	10
Index o	of Figures	
Fig. 1 Fig. 2 Fig. 3	Front PanelControl LocationsInterfacing with 611, 621 and 626 modules	5

#### 1. INTRODUCTION

The 681 is a plug-in module with four separate limit circuits designed to monitor the output signals of transducer amplifiers such as 611, 621, 626.

Each limit may be configured as a high or low (positive- or negative-going) detector with normally open/closed relay or logic 1/0 outputs.

The relays may be operated in normally energised (fail-safe) or de-energised, momentary or latching modes. Latched relay or logic outputs may be reset by either the front panel pushbutton or by an external logic signal.

Various values of hysteresis may be selected to suit the application or reduce the effects of signal noise, etc. Limit status is indicated by front panel LEDs. Limit levels are set by front panel potentiometers which are monitored via the level selector switch and front panel jack, or via the 635/6 monitor.

#### 1.1 BEFORE POWERING-UP, CHECK...

1	The supply voltage is correct to suit the 631/632 unit fitted and input range selected
2	The various plug-in modules are in the correct positions in the housing.
3	The input and output plugs are in the correct sockets. Note that on the housing back-
	plane all input sockets and all output sockets are of the same type.
4	That each module has a unique address. (section 4.6 for this module)


Note: Ensure system is switched OFF when removing or replacing modules and ensure each module has a unique address. Failure to do so may cause damage to modules.

## 1.2 Information on Conformity to EC Directives.

This module is not CE marked because it is intended for use as a component of a larger system. RDP CE mark full modular 600 systems that includes a 60X housing and a 63X power supply where the system is fully populated with either 600 series amplifier/display modules or blank panels.

If the module is part of a full 600 system, refer to the system manual (CD2010) for CE certification.

If the module is not part of the full 600 system, it is the responsibility of the organization/ individual producing the system to assess and/or test EMC compatibility.

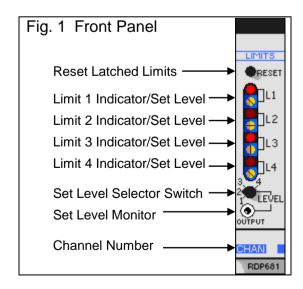

#### 2. CONNECTION DETAILS

(Refer also to Fig.2 and Fig.3)

When plugged into an RDP 600 module rack, connections to the 681 are made via three backplane-mounted circular DIN connectors as shown overleaf.

Input connections may be made either via the circular DIN connectors or via four backplane solder links labelled L1, 2, 3, 4 (accessed on removing the backplane cover plate).

Front panel jack connections for monitoring limit level settings in systems without a 635/6 are:

- 1. Inner contact level output high.
- 2. Middle contact no connection.
- 3. Outer contact level output common (0v).

32-way Pin	7-way DIN A Pin	Function				
1	1	Limit 1 Signal Input				
2	2	Limit 2 Signal Input				
3	3	Limit 3 Signal Input				
4	4	Limit 4 Signal Input				
5	5	Signal Common/0V/Ground				
6	6	No connection				
7	7	No connection				
	5-way DIN C Pin					
8	1	Limit 1 Relay/Logic Output				
9	2	Logic Common/0V/Ground				
10	3	Limit 1 Relay Common Output				
23	4	Reset (see Note)				
	5	No connection				
	7-way DIN B Pin					
11	1	Limit 2 Relay/Logic Output				
12	2	Limit 2 Relay Common Output				
13	3	Limit 3 Relay/Logic Output				
14	4	Limit 3 Relay Common Output				
15	5	No connection				
16	6	Limit 4 Relay/Logic Output				
17	7	Limit 4 Relay Common Output				
18	Level Output					
24-27	Address	Used with 635/6 only				
28, 29	0/5V Supply					
30	+15V					
31	-15V					
32	0VA					

**Note:** for optimum EMC the reset signal should be applied via the Opto-Isolated Option 600 IO. Refer also to Section 3.4.

Fig. 2 Control Locations

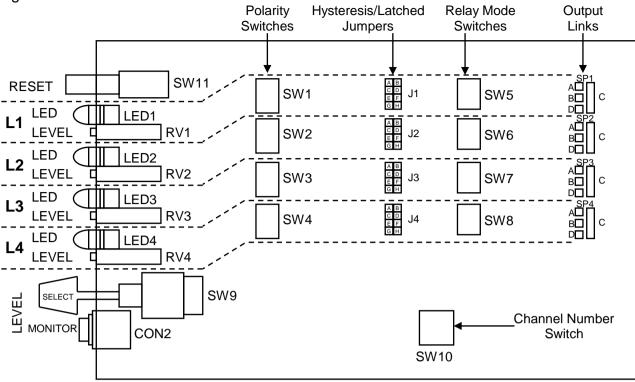


Fig. 3 Interfacing with 611, 621 and 626 modules

a) When 681 is adjacent or near to 611 (e.g. in channels 3 & 4)


Two wire links may be connected via 7 way DIN or soldered directly to solder pads L1, L2.

Backplane Rear View

Fit Two Wire Links

OA (O/P A)
OC
OB (O/P B)

b) When 681 is remote from 611, the L1-L4 bus and solder links may be used to reduce wiring.

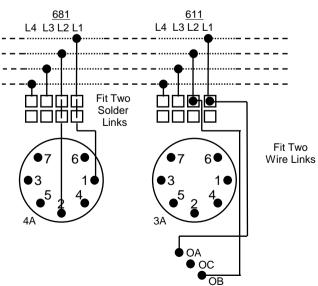

#### 3. FRONT PANEL CONTROLS

#### 3.1 LED 1-4

Four lamps which indicate the state of the relays or logic output. As they are internally connected in series with the relay coils, when the LED is ON then the relay is ON (energised).

The relationship between LED state and relay/logic outputs will vary according to the settings of the polarity and mode switches. This is detailed in Tables 1 and 2.

#### 3.2 Level Potentiometers 1-4

Four twenty-turn screwdriver-adjusted controls which are used to set the limit levels over the range ±10v.

#### 3.3 Level Selector Switch

A four-position rotary switch connecting the potentiometer levels in turn to the front panel jack and 635/6 monitor.

#### 3.4 Reset Switch

A pushbutton which, when pressed, resets all limits which are configured in a latching mode.

**Note:** Limits can also be reset by applying a logic 0 to the rear panel reset (Pin 4 of DIN C connector). To apply a common reset to a system containing several 681s, fit the solder links "R" on the backplane and connect the logic signal to pin 2 of the system rear panel 8-way DIN socket. Refer also to system Manual CD2010, Section 7.6.

## 4. INTERNAL CONTROLS (FOR LOCATION, REFER TO FIG.2)

#### 4.1 Polarity Switches (SW 1-4)

These are 2-position slide switches which determine whether the limits are high (positive-going) or low (negative-going). Set in the UP position for high and DOWN for low. Refer also to Tables 1 and 2 for more details.

## 4.2 Hysteresis Links (J1-J4)

These are 3-position jumper links which	Link	Hysteresis
determine the amount of hysteresis in	A – B	Low
the limit comparator circuit as shown.	C – D	Medium (normal setting)
	E-F	High
	B – D	None

The 681 is normally supplied with the links in the medium position. If noise signals are being monitored and relay chatter, etc. is a problem, then the high position may be used to advantage.

The hysteresis setting does not affect the accuracy of the limit.

Hysteresis is not used when the limit is in latching mode. Refer to 4.3.

## 4.3 Latching Link (J1-J4

The 681 is normally supplied with all limits set for momentary operation. To make any limit latch, link the relevant jumper G-H (as hysteresis is not required, the same jumper link is used as in 4.2).

#### 4.4 Relay Mode Switches (SW 5-8)

These four switches, similar to the polarity switches, are used to determine whether the relays are in a normally energised or normally de-energised mode. For normally de-energised, set the switches in the UP position, and for normally energised (e.g. fail-safe mode), set the switches in the DOWN position.

Refer also to Table 1 for more details.

## 4.5 Output Links SP 1-4

These are 3-way solder pad links	SP 1 – 4	Output
which select the type of output required	A – B	Logic
as shown	B – C	Relay Contacts
	D-C	Relay Contacts

The state of the relay contacts (i.e. normally open or normally closed) will depend on the polarity and mode switch settings. Refer to Table 1 for details.

#### 4.6 Channel Number (Address) Switch (SW7)

This is a 16-way (hexadecimal), screwdriver-adjusted rotary switch scaled 0 to F. When the module is used in a system with a backplane, the individual card address number must be set on this switch.

Each module must have a different number set to avoid signal contention on the A, B and E (excitation) output busses to the monitor. Failure to do so may cause damage to modules.

For example, if the switch is set to 1 then, when the monitor switch is set to 1, only the outputs of No.1 are enabled and connected to the monitor. similarly, for numbers 2-9. For modules 10-15, the switch positions A-F are used as shown below:

Card No.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
Switch Position.	1	2	3	4	5	6	7	8	9	Α	В	С	D	Е	F

#### TABLE 1 1 RELAY OUTPUT OPERATION

Note 1: A HIGH limit monitors positive-going signals.

A LOW limit monitors negative-going signals

< means more negative than: > means more positive than.

N means normal (as despatched) settings

Limit	POL. SW 1-4	MODE SW 5-8	SIGNAL wt LIMIT	LED/ RELAY	CONTACTS W		COMMENTS		
Type	3VV 1-4	344 D-0	Wt LIMI	KELAI	B-C(N)	D-C			
1.HIGH	UP (N)	UP (N)	<	OFF	CLOSED	OPEN			
1.HIGH	OF (IV)	OF (IV)	>	ON	OPEN	CLOSED			
2.HIGH	H UP	LID D	LID	DOWN	<	ON	OPEN	CLOSED	FAIL SAFE
2.111011		OF DOWN	>	OFF	CLOSED	OPEN	I AIL SAI L		
3.LOW	OW DOWN	UP	<	ON	OPEN	CLOSED			
3.LUVV	DOWN	UP	>	OFF	CLOSED	OPEN			
4.LOW	DOWN	DOWN	<	OFF	CLOSED	OPEN	FAIL SAFE		
	DOWN	DOWN	>	ON	OPEN	CLOSED	FAIL SAFE		

Note 2: In fail safe mode the relay is OFF (de-energised) when limit is exceeded or power is removed.

TALE 2 681 LOGIC OUTPUT OPERATION (SP 1-4 SET TO A-C)

LIMIT TYPE	POL.SW 1-4	SIGNAL wrt LIMIT	LED	LOGIC OUTPUT
HIGH	UP (N)	<	OFF	Н
півп	OP (IV)	>	ON	L
LOW	DOWN	<	ON	L
LOW	DOWN	>	OFF	Н

#### 5. SETTING-UP PROCEDURE

- 5.1 Connect signal inputs and relay/logic outputs as detailed in Section 2.
- 5.2 Unplug the 681 and set the polarity and mode switches, hysteresis, latching and output links as required, as detailed in Section 4. Note Tables 1 and 2 provide a quick reference check for most control settings.
  - Check the channel address switch setting is correct.
- 5.3 Plug the 681 into the rack, switch on power and allow 20 minutes warm-up for maximum accuracy.
- 5.4 Select the 681 Channel No. on the 635/6 monitor (if fitted, otherwise connect a voltmeter to the front panel jack).
  - Select A on the 635 and set the 681 level switch to 1. The 635/6 or voltmeter will now indicate the level of limit 1.
- 5.5 Adjust potentiometer L1 for the desired value. Set up limits 3-4 in a similar manner using the level switch and relevant potentiometer.
- 5.6 Press reset if necessary to reset any latching outputs.

# 6. SPECIFICATION

Channels	4 Independent
Signal Range	±10V
Signal Input Resistance	>10MΩ
Accuracy (Note 1)	±2mV typical (0.01% FS)
Response Speed:	
Logic Output	0.2mS for 0.1% accuracy
Relay Output	6mS
Tempco	0.1mV/°C (0.0005% FS/°C) typical
Outputs:	Relay
	Normally open or closed (selectable) 1A, 30V dc/0.5A,
	125V ac
	5 x 10 <sup>5</sup> operations at 1A, 30V dc
	2 x 10 <sup>5</sup> operations at 0.5A, 125V ac
	Logic
	TTL normally high or low (selectable), source 0.4mA, sink 8mA
Hysteresis (Note 2)	Three levels selectable, 30/100/300mV typical
Power	±15V at 100mA typical (4 relays ON)
Operating Temperature	0°C to 60°C
Dimensions	160 x 100 x 14mm (Eurocard)
Front Panel	128 x 25mm (5 x 1 inches)

Note 1: With signal noise < 1mV Note 2: Varies with signal level.