

THE FOLLOWING PAGE CONTAINS THE CONNECTION DETAILS

It is your responsibility to ensure that the transducer identification matches the connection details, including any RDP modification (T.M) references.

Please ensure that the transducer has not been modified or fitted with a cable or extension.

Particularly on DC-DC powered transducers, incorrect connection may cause **IRREPERABLE DAMAGE** to the transducer which is **NOT COVERED BY WARRANTY**

**IF YOU ARE IN ANY DOUBT PLEASE CONTACT US**


DESPATCH:- INCLUDE CD1023 IF TRANSDUCER HAS NO CABLE FITTED.



## DCWV SERIES (CABLE OPTIONS 6 & 9)




### CONNECTION DETAILS

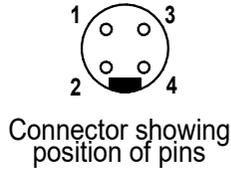

+ 14 TO + 26V dc
Supply Com. (0V)
Output Low
Output High
Instrument Ground

WIRE/PIN  
RED/1  
BLUE/3  
GREEN/4  
YELLOW/2  
SHIELD

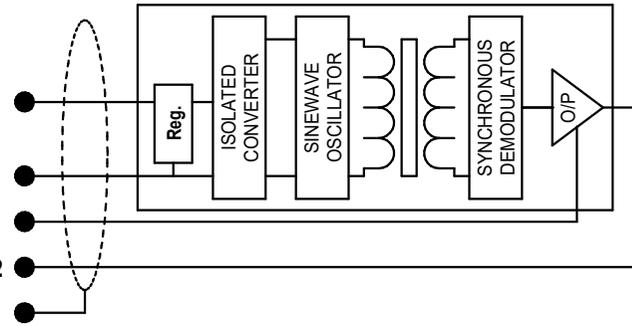

**LOAD IMPEDANCE:** 2k (min) Ohms

**ISOLATION:** 1000V input to output

**PHASING:** Output high positive with respect to output low for outward stroke

**SUPPLY:** Smooth d.c. voltage 14 to 26V

**OUTPUT:** 0 to 10V nom (See Calibration Certificate)

(RDP Calibration Supply 24V)

**NOTE : INCORRECT CONNECTION MAY CAUSE IRREPARABLE DAMAGE  
CONTACT OUR SALES DEPARTMENT IF YOU REQUIRE ASSISTANCE**

For transducers without cable  
see CD1023 for fitting instructions

**RDP U.K.**  
Tel 01902 457512  
Fax 01902 452000



**MADE IN THE  
UNITED KINGDOM**

Doc. Ref. WDUK1803  
ISSUE 1 - 16 OCT 2019

**RDP U.S.A.**  
Tel 610 469 0850  
Fax 610 469 0852