## THE FOLLOWING PAGE CONTAINS THE CONNECTION DETAILS

It is your responsibility to ensure that the transducer identification matches the connection details, including any RDP modification (T.M) references.

Please ensure that the transducer has not been modified or fitted with a cable or extension.

Particularly on DC-DC powered transducers, incorrect connection may cause IRREPERABLE DAMAGE to the transducer which is NOT COVERED BY WARRANTY

IF YOU ARE IN ANY DOUBT PLEASE CONTACT US



## DCWH SERIES (CABLE OPTIONS 6 & 9)



## **CONNECTION DETAILS**

WIRE/PIN

RED/1


BLUE/3

GREEN/4


YELLOW/2


SHIELD

## Dual Supply +12 to +18V Input -12 to -18V Input 0V Common I/P, O/P Output Instrument Ground

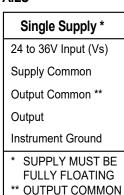

FLOATS AT Vs/2

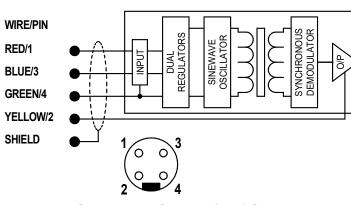

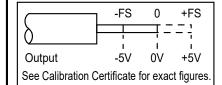

**LOAD IMPEDANCE:** 2k (min.) Ohms with dual supply.

20k (min.) Ohms with single supply. Smooth d.c. voltage 25mA typical

NOTE: INCORRECT CONNECTION MAY CAUSE IRREPARABLE DAMAGE
CONTACT OUR SALES DEPARTMENT IF YOU REQUIRE ASSISTANCE
For transducers without cable see CD1023 for fitting instructions

For transducers without cable see CD1023 for fitting instructions.

RDP U.K. Tel 01902 457512 Fax 01902 452000



MADE IN THE UNITED KINGDOM

SUPPLY:

Doc. Ref. WDUK1853 ISSUE 1 - 16 OCT 2019 RDP U.S.A. Tel 610 469 0850 Fax 610 469 0852