

THE FOLLOWING PAGE CONTAINS THE CONNECTION DETAILS

It is your responsibility to ensure that the transducer identification matches the connection details, including any RDP modification (T.M) references.

Please ensure that the transducer has not been modified or fitted with a cable or extension.

Particularly on DC-DC powered transducers, incorrect connection may cause **IRREPERABLE DAMAGE** to the transducer which is **NOT COVERED BY WARRANTY**

IF YOU ARE IN ANY DOUBT PLEASE CONTACT US




DCWL SERIES (CABLE OPTIONS 2, 3, 4, 5, 8, 10 & 11)



CONNECTION DETAILS

+ 6 TO + 18V dc
Supply Com. (0V)
Output Low
Output High
Instrument Ground

RED
BLUE
GREEN
YELLOW
SHIELD

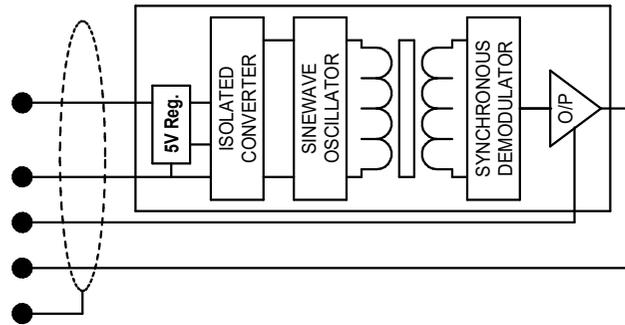

LOAD IMPEDANCE: 2k (min) Ohms

SUPPLY: Smooth d.c. voltage 100mA max.

ISOLATION: 1000V input to output

OUTPUT: $\pm 2.2V$ nom (See Calibration Certificate)

PHASING: Output high positive with respect to output low for outward stroke (RDP Calibration Supply 15V)

**NOTE : INCORRECT CONNECTION MAY CAUSE IRREPARABLE DAMAGE
CONTACT OUR SALES DEPARTMENT IF YOU REQUIRE ASSISTANCE**

RDP U.K.
Tel 01902 457512
Fax 01902 452000



**MADE IN THE
UNITED KINGDOM**

Doc. Ref. WDUK1952
ISSUE 1 - 16 OCT 2019

RDP U.S.A.
Tel 610 469 0850
Fax 610 469 0852