

THE FOLLOWING PAGE CONTAINS THE CONNECTION DETAILS

It is your responsibility to ensure that the transducer identification matches the connection details, including any RDP modification (T.M) references.

Please ensure that the transducer has not been modified or fitted with a cable or extension.

Particularly on DC-DC powered transducers, incorrect connection may cause **IRREPERABLE DAMAGE** to the transducer which is **NOT COVERED BY WARRANTY**

IF YOU ARE IN ANY DOUBT PLEASE CONTACT US


DESPATCH:- INCLUDE CD1023 IF TRANSDUCER HAS NO CABLE FITTED.



DCWL SERIES (CABLE OPTIONS 6 & 9)




CONNECTION DETAILS

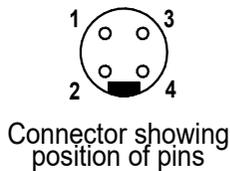

+ 6 TO + 18V dc
Supply Com. (0V)
Output Low
Output High
Instrument Ground

WIRE/PIN
 RED/1
 BLUE/3
 GREEN/4
 YELLOW/2
 SHIELD

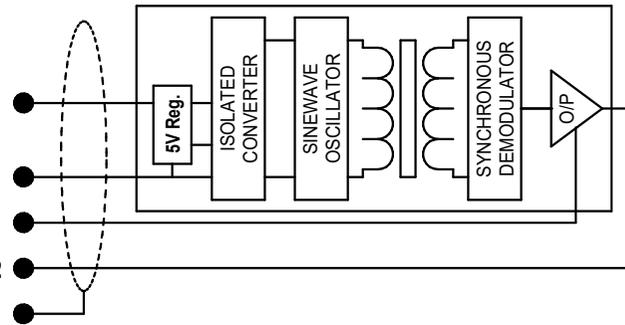

LOAD IMPEDANCE: 2k (min) Ohms

ISOLATION: 1000V input to output

PHASING: Output high positive with respect to output low for outward stroke (RDP Calibration Supply 15V)

SUPPLY: Smooth d.c. voltage 100mA max.

OUTPUT: $\pm 2.2V$ nom (See Calibration Certificate)

**NOTE : INCORRECT CONNECTION MAY CAUSE IRREPARABLE DAMAGE
 CONTACT OUR SALES DEPARTMENT IF YOU REQUIRE ASSISTANCE**

For transducers without cable
 see CD1023 for fitting instructions

RDP U.K.
 Tel 01902 457512
 Fax 01902 452000



**MADE IN THE
 UNITED KINGDOM**

Doc. Ref. WDUK1953
 ISSUE 1 - 16 OCT 2019

RDP U.S.A.
 Tel 610 469 0850
 Fax 610 469 0852