

# Technical Manual TRANSDUCER AMPLIFIER TYPE S7M

# Doc. Ref CD1203AB

This manual applies to units of mod status 8 ONWARDS





of Conformity

USA & Canada RDP Electrosense Inc.

2216 Pottstown Pike

Pottstown, PA 19465 U.S.A. Tel (610) 469-0850 Fax (610) 469-0852 E-mail info@rdpe.com www.rdpe.com All other countries RDP Electronics Ltd

Grove Street, Heath Town, Wolverhampton, WV10 0PY United Kingdom

Tel: +44 (0) 1902 457512

E-mail: <u>sales@rdpe.com</u> <u>www.rdpe.com</u>

# INDEX

	TABL	_E OF FIGURES	2
1.		INTRODUCTION	3
	1.1 1.2	IMPORTANT SAFETY TEST INFORMATION.  Declaration of Conformity.	
2.		CONNECTIONS	6
	2.1. 2.2 2.3 2.4 2.5	Supply	6 7 7
3.		CONTROLS	
	3.1 3.2 3.3 3.4 3.5	Gain (Coarse gain switches and fine gain pot)	10 11 11
4.		SETTING-UP PROCEDURES	12
	4.1 4.2	Voltage Output - LVDT & Half bridge (differential inductance) Transducer 4-20mA Output - LVDT & Half bridge (differential inductance) Transducer	
5.		LIMITS OPTION T	14
	5.1 5.2 5.3 5.4 5.5	Setting the Limit Levels (see also section 5.4)  Connections  Controls (for location, refer to Fig.3).  Limits Operation with 4-20mA Output  Limits Option Specification	14 14 15
6.		OPTION E MAX/MIN STORE	16
	6.2	Specification	16
7.		SPECIFICATION (GENERAL)	
8		APPLICATION NOTES & APPENDICES	
	8.1	App. Note 2 Electrical Interference Problems	18
T/	ABLE	OF FIGURES	
Fig Fig	g.1 g.2(a) g.2(b)		7

### 1. INTRODUCTION

This manual is NOT appropriate for the S7M with option Z. If the unit has option Z fitted; this will be identified on the serial number plate.

The S7M is an a.c. powered oscillator/demodulator signal conditioning unit for use with a wide range of inductive (e.g. LVDT or half-bridge) transducers. A high stability oscillator provides sinusoidal excitation and a synchronous demodulator provides high level voltage or current outputs.

Options include T (dual limits) or E (max/min store) which may also be used with Option Z, but T and E cannot be used together. Other features include: -

- (a) Aluminium case sealed to IP65.
- (b) Screw terminal connections.
- (c) Simple controls for gain and zero adjustment.
- (d) Input zero and circuit test switch.
- (e) Signal overload indicator.
- (f) Excitation frequency change via resistor.
- (g) 115/230V supply selector switch.
- (h) Single jumper link selection of voltage or current output mode.

### 1.1 IMPORTANT SAFETY TEST INFORMATION.

### **ELECTRICAL SAFETY CHECKS**

This instrument was checked for electrical safety, using a portable appliance test instrument, prior to despatch. If the user wishes to carry out their own tests, the following points must be followed:

- (1) This Safety Class 1 apparatus has a low (<3A) fuse rating and a low current rated power connection cable.
- (2) It is recommended that when carrying out an earth bond test, a test current of 25A should not be applied for more than <u>six seconds</u>.
- (3) In general it is **not** recommended that high voltage (e.g. 1.5kV) insulation tests be carried out. This could cause damage to suppressor components.

### **INSTALLATION**

The module may be orientated in any direction but preferably with the glands facing away from any splashing, etc. Resistance to humidity is consistent with the IP rating.

The supply voltage is normally set to 230V unless specified otherwise by the user. If this is changed from that indicated on the label then the label must be changed accordingly.

The unit should be protected from the effects of excessive shock and/or vibration.

### 1.2 Declaration of Conformity.

# **DECLARATION OF CONFORMITY**

RDP ELECTRONICS LTD.
Grove Street Heath Town
Wolverhampton West Midlands
WV10 0PY
United Kingdom

We declare that the product described in this technical manual is manufactured by RDP Electronics Limited and performs in conformity to the following:

The Electromagnetic Compatibility Directive 2014/30/EU

The Low Voltage Safety Directive 2014/35/EU

The RoHS Directive 2011/65/EU


**EMC Regulations SI2016/1091** 

**Electrical Equipment (Safety) Regulations SI2016/1101** 

Restriction of Hazardous Substances Regulations SI2012/3032

R D Garbett
Director
RDP Electronics Limited

Fig.1 Connector & Control Locations

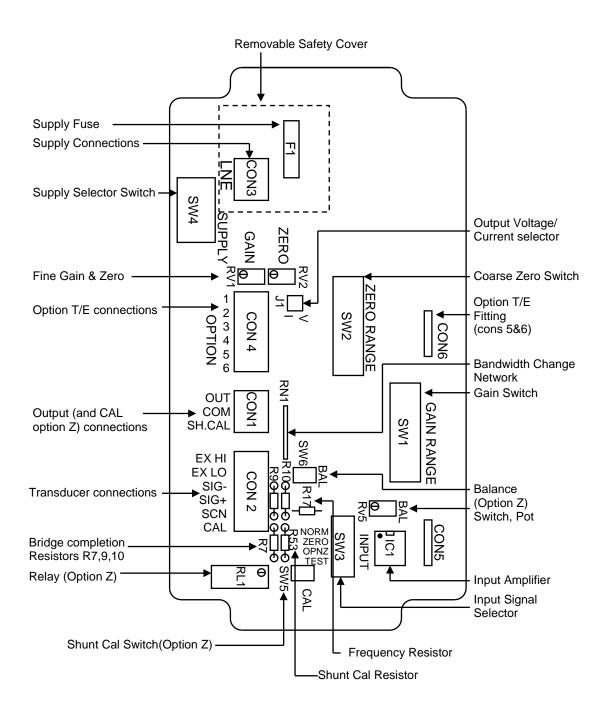

**Note** For mod 12 instruments onwards the frequency resistor is not fitted, different excitation frequencies are available but must be specified at the time of order.

### 2. CONNECTIONS

### 2.1. Supply

### ALWAYS ISOLATE BEFORE ALTERING CONNECTIONS

Check that the voltage on the label near the inlet gland is correct for the application. To change the voltage, operate the slide switch so that it indicates 115 or 230 volts to suit the supply. For supplies less than 100V, change solder link SP1 (near the fuse) to B-C).

The supply terminal block is revealed on removing the internal clip-on cover (squeeze the tips of the plastic studs to release). The supply lead is fed through the largest of the three glands and is connected as shown below:

L	Live	115/230V a.c	brown (black US)
N	Neutral	0V	blue (white US)
E	Earth/ground		green/yellow (green US)

All metal case parts are connected to the E terminal.

### 2.2 Input & Output Connections

For details of input and output connections, refer to Fig.1 and Fig.2a. To utilise the central gland for both output and option connections, use a multi-core shielded cable such as Farnell 6-core 1A No. 715-244, or RS 9-core 0.25A No. 367-381, or one of the various shielded data cables readily available.


### 2.3 EMC Compliance

- 2.3.1 For EMC compliance only shielded multi-core cables should be used for the signal input and output connections to this instrument.
- 2.3.2 The shields of the two cables may be connected to the SCN and common terminals of the transducer connector and output connector, but, for optimum EMC, the cable shield should be terminated as shown in Fig. 2(b).
- 2.3.3 ESD precautions should be used when working on the instrument with the lid removed. The user should ensure he is "earthed" by use of an earthed wrist strap or at least touching earth before touching any component, including wires, terminals or switches.
- 2.3.4 Segregate signal/supply/output cables.
- 2.3.5 The transducer body should be earthed. Some transducers without an internal case-to-cable shield connection will require a separate connection. This should be to the instrument cable shield or as near (electrically) as possible to this point.
- 2.3.6 The supply cable green/yellow wire provides a safety ground but for optimum EMC it is desirable to bolt the case via the holes provided to a substantial grounded base.


Fig.2(a) Examples of connections to various types of transducers

Refer to connection diagram supplied with the transducer.

# 2.4 Connections for LVDT Displacement Transducer (Note 1)

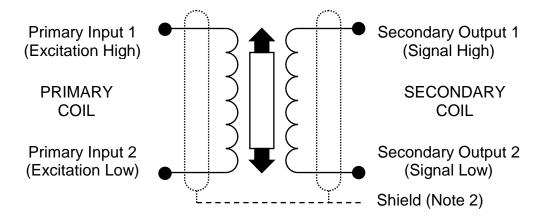

### 2.5 Connections for Half bridge (Differential Inductance) transducer (Note 1)

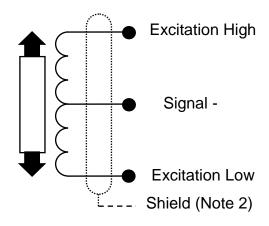


Additionally, fit 2 bridge completion resistors: (Note 3)

- 1) between Excitation + and Signal +
- 2) between Excitation and Signal +


The resistors should be high stability. For RDP transducers use 1k Ohms

- Note 1 The output voltage polarity may be reversed by reversing the excitation connections or, for LVDT, the signal connections.
- Note 2 Connect SHIELD as shown in fig. 2b
- Note 3 Completion resistors may be fitted in positions R7 and R10 (these are shown in fig.1) or in the transducer connector.

Fig.2(b) Signal Cable Installation for Optimum EMC

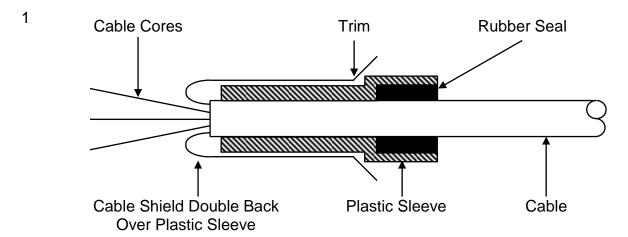

2 Insert the end of the cable, plus the plastic sleeve into the metal outer shell of the gland. The bore of the gland is a tight fit onto the cable shield, giving the required ground contact.

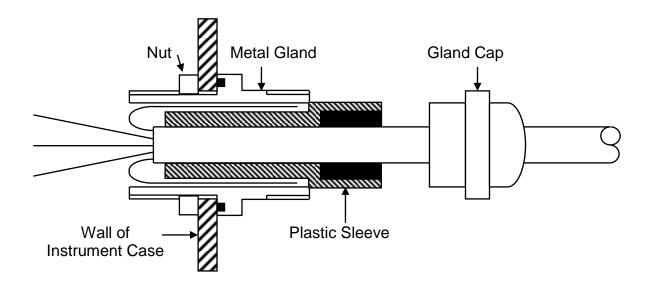

3 Fit gland cap and tighten

### 3. CONTROLS

The standard controls are described below; while controls fitted to option cards are described in the respective sections.

# 3.1 Gain (Coarse gain switches and fine gain pot)

Two controls, coarse and fine, allow an infinite adjustment of gain from x.03 to x200, providing a ±10V dc output for signals of 50mV rms. upwards. The maximum signal input voltage is 20V before saturation occurs, the lower gain ranges being designed for output scaling of considerably less than 10V, when required, with high-output transducers.

Typically, transducer manufacturers' data sheets or calibration certificates will give a figure allowing the full-scale output to be calculated. Possible formats for this are as follows; **the examples assume a transducer range of ±50mm.** 

Sensitivity format	Explanation	To convert to F.S. output			
mV/V/mm	Millivolts of output, per volt	Sensitivity x 5 x range in mm			
e.g. 46mV/V/mm	of excitation, per mm of	e.g. 0.046 x 5 x 50 = 11.5V			
	travel				
V/V at full-scale,	Volt of output, per volt of	Sensitivity x 5			
e.g. 2.3 V//V	excitation, at full-scale	e.g. 2.3 x 5 = 11.5V			
mV/mm at a specified	Millivolts of output, per mm	(Sensitivity / specified exc.			
excitation voltage.	of travel, given a specified	voltage) x 5 x range in mm			
E.g. 230mV/mm at 5V exc.	excitation voltage. e.g. (0.230/5) x 5 x 50=11.5				
The standard excitation of the S7M is 5V, as used in the calculations above.					

The following table shows the band of transducer full-scale output voltages appropriate to each of the 10 Gain Range Settings. For example, a transducer with a full-scale output of 11.5V would be correctly set as gain range 3.

**Coarse:** The nominal gain is set by either a 10 position slide switch (up to mod 12) or a DIL slide switch (mod 12 onwards). This allows a continuous gain variation covering a wide range of transducer signal as shown below.

Input Signal Range Volts - r.m.s.	Gain Switch position up to Mod 12		Toggles ON  Mod 12 onwards	
	V (±10V)	I (4-20mA)	V (±10V)	I (4-20mA)
20 max	1	-	1	-
20 max	2	1	1 + 2	1
10 - 20 max	3	2	1 + 3	1 + 2
5 - 12	4	3	1 + 4	1 + 3
2.2 - 5.1	5	4	1 + 5	1 + 4
1 - 2.5	6	5	None	1 + 5
0.5 - 1.2	7	6	2	None
0.22 -0 .51	8	7	3	2
0.11 -0.25	9	8	4	3
0.05 - 0.12	10	9	5	4
0.02 - 0.06	-	10	-	5


The output signal of all R.D.P. transducers is given on the Calibration Certificate to facilitate choice of the correct gain range.

**Fine:** A screwdriver-adjusted 20-turn potentiometer providing a 2:1 adjustment of gain, interpolating between the coarse gain ranges.

### 3.2 Zero (Coarse zero switch and fine zero pot)

Two controls, coarse and fine, are used to set the initial output voltage to zero or provide zero suppression, etc.

**Coarse (up to mod 12):** a 10-position slide switch providing a shift in output voltage of ±10V in 2.5V\* steps (position 10 not used). Position 5 is normal, with 6-9 increasing the output in the positive direction and 4-1 in the negative direction is as shown:

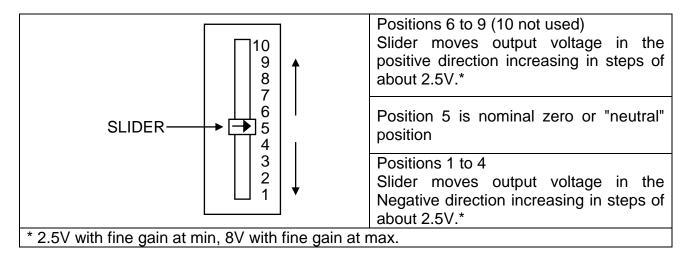

**Coarse (mod 12 onwards):** This is a 6-way DIL switch used to inject different amounts of zero suppression of the output signal, e.g. to obtain a unipolar output signal from a bipolar LVDT. The amplitude and polarity of the output shift provided by the various settings are shown below. Note these will vary according to the Fine Gain setting.

Toggles ON	Approximate Output Shift in Volts
2 + 5	+10.0
2 + 4	+7.5
2 + 3	+5.0
2	+2.5
NONE	0
1	-2.5
1 + 3	-5.0
1 + 4	-7.5
1 + 5	-10.0

**Fine:** a 20-turn screwdriver-adjusted potentiometer used in conjunction with coarse zero, providing adjustment of output to any value in the range ±10V.

# 3.3 Input Switch

A 4-position slide switch that provides the following functions:

Switch Posn	Function
1/NORM	For LVDT and other transducers not requiring input Option Z.
2/ZERO	Connects the amplifier input to 0V/common to allow zero output to be set (zero finder).
3/OPNZ	Option Z – for use when input Option Z is fitted.
4/TEST	Injects a signal from the excitation into the amplifier input to check operation. Inoperative for Option Z.

# 3.4 Over-Range (O/R) LED

A red LED indicating when the demodulator input signal exceeds the linear range. This may indicate a lower GAIN RANGE setting is required.

# 3.5 Output Jumper Link

A 2-position jumper link which, when set to V, selects voltage (±10V) output mode or, when set to I, selects current (4-20mA) output mode.

### 4. SETTING-UP PROCEDURES

### 4.1 Voltage Output - LVDT & Half bridge (differential inductance) Transducer

- **4.1.1** Determine the transducer output from the manufacturer's data and set the coarse gain. Refer to section 3.1.
- **4.1.2** Connect the transducer to the 6-way connector as detailed in Figure 2. Switch ON power and allow a 20-minute warm-up period (for maximum accuracy).
- **4.1.3** Set the INPUT Switch to ZERO and adjust the ZERO controls for zero output (measured with a voltmeter).
- **4.1.4** Set the INPUT switch to NORM (normal). Adjust the transducer armature until the output is zero volts (measured with a voltmeter). (The FINE ZERO control may be used to obtain an absolute zero indication if the armature adjustment is too coarse.) This determines the transducer centre-stroke position.

Now proceed with either 4.15 or 4.16 according to application.

### 4.1.5 Bipolar Operation, e.g. ±5mm gives ± 10V output.

- (a) Move the transducer armature by a precise amount, usually the full scale. (E.g. 5mm (0.200 inches) for ±5mm (±0.2") transducer) and adjust the FINE GAIN control for the desired output, e.g. 10V. If the output polarity is wrong, reverse the signal wires (blue/green).
- (b) Relocate the transducer armature at the centre of the stroke and check that the OUTPUT is zero, re-adjust the FINE zero control if necessary. Repeat (a).
- (c) Move the armature 5mm (0.2 inches) the other side of centre-stroke and check for 10V. (A small discrepancy is allowed)

### 4.1.6 Unipolar Operation, e.g. 0 - 10mm stroke gives 0-10V output.

In order to obtain a 0 to 10V output for  $\pm$  Full scale on the transducer, first calibrate the transducer for  $\pm$ 5V for  $\pm$  Full scale as detailed in 4.15

Position the transducer such that the output is 0V. Using the coarse and fine ZERO controls offset the output by +5V. This adds 5V to all positions so that -5V becomes 0V and +5V becomes 10V.

### 4.2 4-20mA Output - LVDT & Half bridge (differential inductance) Transducer

Full stroke operation, e.g. ±5mm (10mm) stroke gives 4-20mA output.

- 4.2.1 Determine the transducer output from the manufacturer's data sheet and set the coarse gain control. (Refer to section 3.1).
- 4.2.2 Connect the transducer to the 6-way connector as detailed in figure 2. Change jumper link J1 to position "I". Switch ON power and allow a 20-minute warm-up period (for maximum accuracy).

- 4.2.3 Set the INPUT switch to ZERO and adjust the ZERO controls for 4mA output. (Measured with an ammeter)
- 4.2.4 Set the INPUT switch to NORM (normal). Adjust the transducer armature until the output is 4mA (measured with a current meter). (The FINE ZERO control may be used to obtain an absolute 4mA indication if the armature adjustment is too coarse.) This determines the transducer centre-stroke position.
- 4.2.5 Move the transducer armature to the positive full scale position e.g. +5mm (+0.2 ") for a ±5mm (±0.2") transducer and adjust Fine Gain for 12mA output.
- 4.2.6 Move the transducer armature to the centre-stroke position and adjust FINE ZERO for 4mA output if necessary.
- 4.2.7 Repeat 4.25 and 4.26 until consistent results are achieved. (This may take a number of settings due to the interaction of the controls.)
- 4.2.8 Move the transducer armature to the negative full-scale position and use the COARSE and FINE ZERO controls to set 4mA output.
- 4.2.9 Move the armature to the positive full-scale position and check output is 20mA. Repeat 4.28 and 4.29 if necessary.

### 5. LIMITS OPTION T

This is a plug-in module with two separate trip limit circuits. Refer to section 5.5 for details of specification. Each limit may be configured as a high or low (positive- or negative-going) detector with normally open/closed relay outputs.

The relays may be operated in normally energised (fail-safe) or de-energised modes.

Limit status is indicated by two LEDs, which are ON when the relay is energised, irrespective of operating mode.

Limit levels are set via multi-turn potentiometers over the range ±10v and monitored via two test points, TP1 (L1) and TP2 (L2).

### 5.1 Setting the Limit Levels (see also section 5.4)

The limit levels may be set in two ways: -

- (a) Monitoring the potentiometer levels at test point TP1 (L1) or TP2 (L2) with a voltmeter with respect to common TP3 (0V). The meter impedance should be  $>1M\Omega$ .
- (b) Adjust the transducer for the required output signal level then adjust the limit potentiometer until the LED changes state.

### 5.2 Connections

Connections to the limits relays are made via		Function	Terminal
the 6-way terminal block labelled "OPTION"	1	NO	1
as follows:-	1	Common	2
	1	NC	3
	2	NO	4
	2	Common	5
	2	NC	6

### 5.3 Controls (for location, refer to Fig.3)


### 5.3.1 Polarity Switches (SW1, 2)

These are 2-position slide switches that determine whether the limits are high (positive going) or low (negative going). Set in the UP position for high and DOWN for low. Refer also to Table 1.

### 5.3.2 Relay Mode Switches (SW3, 4)

These two switches, similar to the polarity switches, are used to determine whether the relays are in a normally energised or normally de-energised mode. For normally de-energised, set the switches in the UP position; and for normally energised (e.g. fail-safe mode), set the switches in the DOWN position. Refer also to Table 1 for more details.

Fig.3 Limits Option control Locations

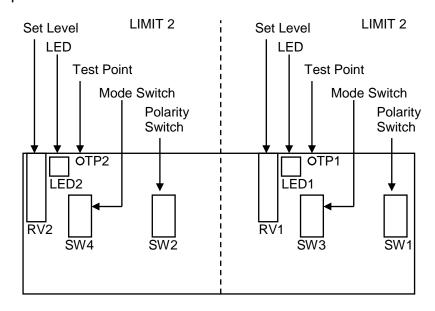

### TABLE 1 RELAY OUTPUT OPERATION

Note 1: A HIGH limit monitors positive-going signals.

A LOW limit monitors negative-going signals

< Means more negative than: > means more positive than.

N means normal (as despatched) settings

Note 2: In fail safe mode the relay is OFF (de-energised) when limit is

exceeded or power is removed.

Limit Type	POL. SW 1,2	MODE SW 3,4	SIGNAL wrt LIMIT	LED/ RELAY	COMMENTS
1.HIGH	UP (N)	UP (N)	<	OFF	
			>	ON	
2.HIGH	UP	DOWN	<	ON	FAIL SAFE
			>	OFF	
3.LOW	DOWN	UP	<	ON	
			>	OFF	
4.LOW	DOWN	DOWN	<	OFF	FAIL SAFE
			>	ON	

### 5.4 Limits Operation with 4-20mA Output

When using current (4-20mA) output mode, the signal applied to the limits option board is derived from the output of a current-sensing amplifier which acts as a current to voltage converter.

The limit level voltages, as monitored via the L1, L2 test points, are compared to this current-derived signal and should be set with reference to the formula:

Limit level voltage = output current in mA x 0.25 volts.

E.g. for 20mA output, the voltage applied to the limit is  $20 \times 0.25 = 5V$ . So, for a limit to operate at 20mA output set the test point level to 5V.

### 5.5 Limits Option Specification

Channels	2 independent		
Signal Range	±10V/±20mA (see Section 5.4)		
Accuracy	±10mV typical (0.05% FS) (With signal noise <1mV)		
Response Speed	6ms		
Tempco	0.1mV/°C (0.0005% FS) typical		
Outputs	Normally open or closed (selectable) 1A, 30Vdc/0.5A, 125Vac		
Hysteresis	20mV typical		
Expected life cycle	5 x 10 <sup>6</sup> operations		

### 6. OPTION E MAX/MIN STORE

This optional circuit board provides a separate output signal that may be selected (via an external wire link) to store either the maximum/ peak or minimum/trough value of the normal output signal (which remains unaffected at the normal output terminal).

The circuit combines high speed and accuracy with zero output droop. Note that MAXIMUM = the most positive value, and MINIMUM = the most negative value of the output signal range.

6.1 Connections	Terminal	Function
These are made via the 6-way terminal	1	Store output (±10V)
block labelled OPTION as follows:	2	Output common (0V)
	3	+15V output (see text)
The stored (peak or trough) output is	4	Reset input : isolated
monitored via terminals 1 and 2. Terminal	5	Reset common : isolated
2 is internally connected to the normal	6	Max/Min select
output common.		

The reset input is opto-isolated to improve EMC. To utilise this facility fully, an external supply should be connected between terminals 4 and 5 to reset the output, then disconnected prior to beginning a new measurement. If an external supply is not available, the S7M +15V output may be used, which removes the benefits of isolation. Connecting terminal 3 (15V) to 4, and 5 to 2 common (via switch etc.) will reset the output.

With no connection to terminal 6, the unit will operate in peak store mode (determined via an internal pull-up resistor). To operate in trough mode, connect 6 to 2.

### 6.2 Specification

Signal Range	±10V				
Accuracy	±0.1% FS. (±20mV plus any signal ripple. See note.)				
Response Speed	0 – FS (10V) in ≥1ms for 0.1% accuracy				
Reset input	Opto-isolated 5 to 24V into 2.2k $\Omega$ + diode for $\geq$ 50ms. Isolation 240V.				
Max/Min Select	Link to unit common (0V) or TTL low (internal 10kΩ pull-up)				
Output	±10V at 5mA				

Note: The Option E board contains an extra active filter circuit to reduce the errors attributable to carrier ripple.

# SPECIFICATION (GENERAL) Refer also to 5.5 (Limits) and 6.2 (Max/Min) .

Supply	115V or 230V ac (selectable). +10%/-20% 50/60Hz at 2.5VA typical. Refer also to Section 2.1.		
Fuse	250mA. T-type 20 x 5mm		
Excitation	5V rms. @ 5kHz 100mA max. (1-10kHz s	electable, contact RDP).	
Excitation Tempco	±0.003%/°C typical		
Amplifier Output (selectable)	±10V at 50mA max. (short-circuit proof), or 4-20mA or 0-20mA into 0 to 600 ohm. This is an active output that should not be connected to any external power supply as this will damage unit.		
Amplifier Gain	x0.15 to x200 in 10 steps with fine interpo	lation	
Linearity	±0.1% of full scale maximum		
Demodulator	Synchronous		
Zero Tempco	±0.002% F.S./°C typical optimum at ±10V o/p (0.01% for I mode)		
Gain Tempco	±0.004% F.S./°C typical optimum at ±10V o/p (0.01% for I mode)		
Bandwidth	Flat to 500Hz (others selectable, via plug-in resistor network. Contact RDP)		
Output Noise	5mV typical (pk-pk) at 10kHz		
Input Resistance	100k ohm differential		
Zero Adjust Range	±10V minimum		
	When subjected to radiated electromagnetic energy (as EN61000-4-3) an additional error can occur at certain frequencies:		
EMC Specification	Field Strength	Typical Maximum Error	
	10V/m	2%	
	3V/m	0.2%	
Temperature Range	-10 to +50°C		
Dimensions (exc. cable glands)	220 x 120 x 81 mm (8.7 x 4.75 x 3.25 inches)		
Weight 1.8 kg (3.96 lb)			
Physical Protection	IP65 specification		
Gland Cable Diameter	3 to 6.5 mm (0.12 to 0.25 inches) for signals 5 to 9 mm (0.2 to 0.35 inches) for supply		

### 8 APPLICATION NOTES & APPENDICES

### 8.1 App. Note 2 Electrical Interference Problems

When a Transducer Amplifier is used in an industrial application, some of the following points may be helpful to system engineers to design a trouble-free installation.

In general the operation of electronic instruments and transducers can be affected by electrical interference.

This interference can be generated by the switching of large or reactive loads on the supply causing the production of large voltage spikes and/or variation in the ac mains supply.

Higher frequency interference (radio frequency) is often generated by a large voltage (e.g. back emf from a coil) being switched by a contact. Generally a contact seen to arc whilst switching is producing RF interference. Other sources of RF include portable radios, telephones, etc.

The interference "signals" can enter a transducer measuring system in the following ways:

- a) Direct pick-up by wiring to the instrument. The wiring can be a connection to the transducer supply input or control (e.g. trip relay).
- b) Direct pick-up into the instrument.
- c) Along the mains supply lines.

There are two methods of countering these problems:

- a) Suppress the interference generation at source.
- b) Prevent the interference gaining access to the instrumentation circuitry.

Suppression at source is often the best approach. AC coils can often effectively be suppressed by means of connecting, as close to the coil terminals as possible, a 100 Ohm resistor in series with  $0.1 \mu F$  across the coil. Proprietary transient voltage clippers - either non-linear resistor or better semiconductor types - are very useful for suppression, mounted across coils and contacts.

Although RDP instruments are fitted with supply suppressors, an exceptionally noisy mains supply can be improved by means of a mains filter unit. These units in their simplest form consist of capacitors and inductors. Mounted at the point where the mains enters the instrument, they can be most effective. A constant voltage transformer is another effective way of cleaning up the mains.

Extra shielding of the transducer, cabling and instrument is a simple, low cost method of preventing particularly directed radiated RF type of interference.

Shielded cable should always be used to connect the transducer to the instrument. Shielded cable is often beneficial for other connections as well. The shield should only be earthed at the instrument end.

It is not good practice to mount the instrument near to contactors, motors, switch transformers, solenoids, etc., but where it is considered necessary to mount the instrument near to such devices, an extra steel enclosure around the instrument would be essential.

In extreme cases, the transducer cable should be run in a steel conduit.

Trip relays fitted inside the Indicator should never be used to switch ac coils. The recommended arrangement is to use a dc slave relay as shown below.

