



# Technical Manual TRANSDUCER INDICATOR TYPE E309

## Doc. Ref CD1602Y

This manual applies to units of mod status 12 ONWARDS





#### **USA & Canada**

#### RDP Electrosense Inc.

2216 Pottstown Pike Pottstown, PA 19465 U.S.A.

Tel (610) 469-0850 Fax (610) 469-0852 E-mail info@rdpe.com www.rdpe.com

### All other countries

### **RDP Electronics Ltd**

Grove Street, Heath Town, Wolverhampton, WV10 0PY United Kingdom

Tel: +44 (0) 1902 457512

E-mail: <u>sales@rdpe.com</u> <u>www.rdpe.com</u>

# INDEX

1.		INTRODUCTION	3
		IMPORTANT SAFETY TEST INFORMATION.	
	1.2	Declaration of Conformity	4
2.		INSTALLATION INSTRUCTIONS	5
	2.1	EMC Requirements	5
		Power Connections	
		Input and Output Signal Connections	
	2.4	Transducer Connections (LVDT & Half bridge)	
3.		FRONT PANEL CONTROLS	8
;	3.1	Zero Potentiometer	8
		Gain Potentiometer	
		Decimal Point Switch (DP)	
		Limits Switch  Limit Level Potentiometers	
	ა.၁		
4.		REAR PANEL CONTROLS	
		Gain Range Switch & Selection	
		Zero Input Switch	
		Zero Suppression Switch (Coarse Zero)	
		Output Gain Potentiometer  Output 0mA/4mA Potentiometer	
		Display Hold (Connector PL2)	
		Display Test (Connector PL2)	
5.		INTERNAL CONTROLS	
,	5.1	Essential precautions prior to opening unit.	.13
	5.2	Supply Voltage	.13
		Limits Mode	
;	5.4	Frequency	.14
6.		SETTING-UP PROCEDURE	.15
(	6.1	Factory-Calibrated Systems	.15
		Bipolar calibration (e.g. ±5.000mm display)	
		Unipolar calibration (e.g. 0 to 10.000mm display)	
(	6.4	High Temperature LIN Transducers	
7.		SPECIFICATION	.16
8.		APPLICATION NOTES	.18
	8.1	Electrical Interference Problems	.18
		Bench/portable instrument	
Та	ble	of Figures	
	g. 1	Connection for LVDT Transducers	7
	g. 2	Connections for Differential Inductance (Half Bridge) Transducers	
	g. 3	Internal control locations	
Fic	n. 4	Limits graphic with normal mode-link setting	. 13

## 1. INTRODUCTION

The E309 is an excitation/signal conditioning unit designed for use with LVDT, half-bridge and similar a.c. transducers. A digital display provides indication, in engineering units, of displacement, pressure, etc. together with analogue voltage and current outputs. Two high-speed limit detectors provide volt-free relay outputs.

#### Features include:

- a) Simple setting-up via switches/potentiometers.
- b) Coarse gain and zero switches for long-term stability.
- c) Standard ±10V and 0/4-20mA analogue output.
- d) Bench or panel-mounting metal DIN case.
- e) Two independent limit detectors settable for Hi or Lo operation, with changeover relay contacts and logic outputs.
- f) Display-hold and lamp-test facilities.
- g) Front panel switch for decimal point position.
- h) Selection of 5 kHz or 2.5 kHz carrier frequency.
- i) Large, bright, 4½ digit display.
- j) Shielded connectors for improved EMC.

## 1.2 IMPORTANT SAFETY TEST INFORMATION.

## READ AND UNDERSTAND THIS MANUAL BEFORE USING THE INSTRUMENT

### **ELECTRICAL SAFETY CHECKS**

This instrument was checked for electrical safety, using a portable appliance test instrument, prior to despatch.

If the user wishes to carry out his own tests, the following points must be followed:

- (1) This Safety Class 1 apparatus has a low (<3A) fuse rating and a low current rated power connection cable.
- (2) It is recommended that when carrying out an earth bond test (BS EN 61010-1 Section 6), the test current of 25A should not be applied for more than **six seconds**.
- (3) In general it is <u>not</u> recommended that high voltage (e.g. 1.5kV) insulation tests are carried out (BS EN 61010-1, Section 6). This could cause damage to suppressor components.

## **DECLARATION OF CONFORMITY**

## RDP ELECTRONICS LTD.

Grove Street Heath Town Wolverhampton West Midlands WV10 0PY United Kingdom

We declare that the product described in this technical manual is manufactured by RDP Electronics Limited and performs in conformity to the following:

The Electromagnetic Compatibility Directive 2014/30/EU

The Low Voltage Safety Directive 2014/35/EU

RoHS Directive 2011/65/EU

EMC Regulations SI2016/1091

Electrical Equipment (Safety) Regulations SI2016/1101

Restriction of Hazardous Substances Regulations SI2012/3032

R D Garbett
Director
RDP Electronics Limited

## 2. INSTALLATION INSTRUCTIONS

## 2.1 EMC Requirements

For full EMC compliance, only shielded multi-core cables should be used for connection to this instrument; the cable shield to be terminated by means of a short "pig-tail" and connected to the connector cover.

The metal case should be earthed. This would usually be achieved via the green/yellow core of the supply cable.

## **NOTES**

- 1 Cable shields to be earthed at only one end the instrument end.
- When the instrument is a small part of a large electrical installation, ensure the cables to and from the instrument are segregated from electrically noisy cables.
- 3 Ensure cables to and from the instrument are routed away from any obviously powerful sources of electrical noise, e.g. electric motors, relays, solenoids.
- 4 ESD precautions should be used when working on the instrument circuit board with the lid removed. The user should ensure he is "earthed" by use of an earthed wrist strap or at least touching earth before touching any component including wires, terminals or switches.
- The body of the transducer should be earthed. If the transducer fixing attachments to not provide a good earth, then an earth strap should be used.

Refer to Section 8 where electrical interference may be a problem.

### 2.2 Power Connections

Refer to section 5.2. The ac supply is connected via a 2 metre, 3-core cable (supplied) as follows:-

LIVE (120/240V) - BROWN NEUTRAL - BLUE

EARTH/GROUND - GREEN and YELLOW

Where a unit has an internal supply fuse, the value will be indicated in the specification. If no fuse is specified, then an external one should be fitted, of the anti-surge type, with a value commensurate with the VA rating of the unit as indicated in the external label. Units should always be grounded via the supply for reasons of safety and electrical noise. The green and yellow wire is normally internally connected to the instrument common or 0V line and hence to the transducer cable shield.

Refer also to the section on internal controls for details of supply voltage selection, and to the Application Note on electrical interference.

## 2.3 Input and Output Signal Connections

Refer also to Fig. 3 and Rear Panel Printing.

Transducer analogue output and relay output connections are made via shielded connectors at the rear of the instrument as shown below:

## Note 1

The limit relay contacts should only be used to switch:

- a) DC resistive or reverse-diode protected inductive loads;
- b) AC resistive loads.


AC coils should be operated via a slave dc relay or SCR module.


FUNCTION		PIN No.		<b>PLUG</b> Viewed from rear
Limit Relay 1	N.O.	5	PL1	
(Note 1)	Common	4	Limits Output	
	N.C.	3	9-way D-type	
Limit Relay 2	N.O.	2		
(Note 1)	Common	1		$\left( \bigcap_{1}^{5} \bigcap_{1}^{4} \bigcap_{1}^{3} \bigcap_{1}^{2} \bigcap_{1}^{1} \right)$
	N.C.	9		
Logic Outputs Lir	nit 2, Limit 1	7, 8		
Logic/Digital Con	nmon (Mod.19	6		$\left \begin{array}{c} \left( \begin{array}{c} 0_9 \\ \end{array} \right)_8 \\ \left( \begin{array}{c} 7 \\ \end{array} \right)_6 \right $
units onwards)				
Display Hold Inpu	ut	1	PL2	
Lamp Test Input		2	Analogue Output/	
Analogue Output ±10V		3	Digital Input	07 60
Analogue Output common/0V		4	7-way DIN type	(03 10)
Analogue Output 0/4-20mA		5		5 4
No connection	No connection			$\begin{bmatrix} 0 & 2 & 0 \end{bmatrix}$
Digital 0V		7		
Excitation +		1	PL3	
Excitation –		2	Transducer	07 60
Signal +		3	Connections	
Signal –		4	7-way DIN type	(03 10)
Cable shield		Con. shell		$\left(\begin{array}{cccccccccccccccccccccccccccccccccccc$
No connection		6, 7		

## 2.4 Transducer Connections (LVDT & Half bridge)

#### TRANSDUCER INPUT CONNECTOR

Transducer connections are made via the 7 pin DIN connector (PL3) marked 'Transducer'. The diagram shows the REAR view of the connector.

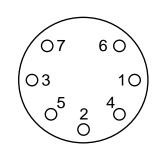


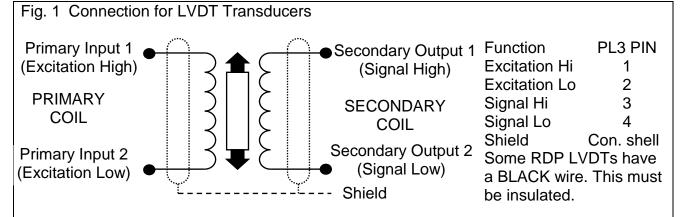

Rear view

If when connected, the phase of the amplifier output is not as required (for example, an inward moving armature causes a rising amplifier output when a falling output is required) then reversing the signal high and signal low wires will correct this.

Fig. 2 Connections for Differential Inductance (Half Bridge) Transducers

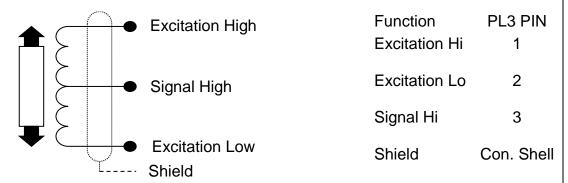


In addition to these connections, it is necessary to add two bridge completion resistors to compensate for the fact that the transducer is only half bridge. For RDP transducers, the resistors should be 1k Ohms, high stability. These may be added in one of two places:-

- a) In the connector, between pins 1 and 4 and pins 2 and 4.
- b) Inside the instrument in locations R19 and R20 (see Fig. 3 for location), read 5.1 before commencing. See schematic below.

If when connected, the phase of the amplifier output is not as required (for example, an inward moving armature causes a rising amplifier output when a falling output is required) then reversing the excitation high and excitation low wires will correct this.

## 3. FRONT PANEL CONTROLS

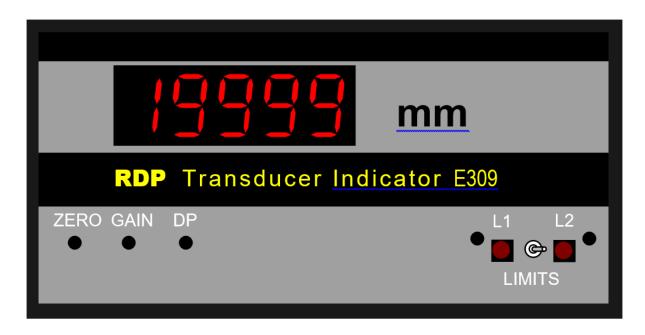

All potentiometers are multi-turn, screwdriver-adjusted.

## 3.1 Zero Potentiometer

This provides fine adjustment of the display and analogue output zero levels. Its range will depend on the setting of the Fine Gain control.

### 3.2 Gain Potentiometer

(Refer also to 4.1)

This provides a 2:1 adjustment of amplifier gain and is effective on both the display and analogue outputs. Together with the Gain Range switch, allows full scale setting for any input voltage in the specified range.

## 3.3 Decimal Point Switch (DP)

This is a screwdriver-adjusted rotary switch. In some positions two or three points may be lit simultaneously: continue rotation (in either direction) until the required point is lit.


#### 3.4 Limits Switch

With this 3-way switch in the central (normal) position, the display monitors the transducer signal. When set to the left (L1) the display indicates the level of Limit 1. When set to the right, the display indicates the level of Limit 2.

## 3.5 Limit Level Potentiometers

These are used to set the limit levels while being monitored by the display as in 3.4. The range of these controls is ±full scale (±19999 digits).

## 4. REAR PANEL CONTROLS

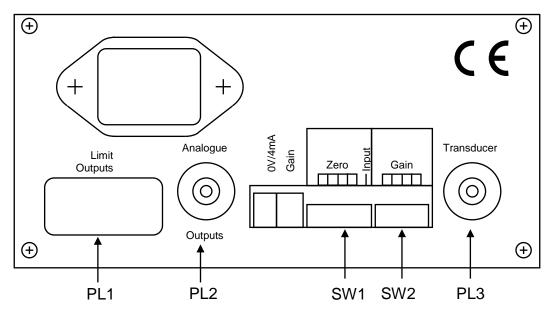

## 4.1 Gain Range Switch & Selection

Refer also to 3.2 and Section 4.1.1

DIL switch SW2 is used to select the required amplifier gain range as shown in the table below (Note: set lever DOWN for ON).

### 4.1.1 Gain switch lever selection table.

Typically, transducer manufacturers' data sheets or calibration certificates will give a figure allowing the full-scale output to be calculated. Possible formats for this are as follows, the examples assume a transducer range of ±50mm.

Sensitivity format	Explanation	To convert to F.S. output
mV/V/mm	Millivolts of output, per volt	Sensitivity x 5 x range in mm
e.g. 46mV/V/mm	of excitation, per mm of	e.g. 0.046 x 5 x 50 = 11.5V
	travel	
V/V at full-scale,	Volt of output, per volt of	Sensitivity x 5
e.g. 2.3 V//V	excitation, at full-scale	e.g. 2.3 x 5 = 11.5V
mV/mm at a specified	Millivolts of output, per mm	(Sensitivity / specified
excitation voltage.	of travel, given a specified	excitation voltage) x 0.5 x
E.g. 230mV/mm at 5V	excitation voltage.	range in mm
exc.		e.g. (0.230/5) x 5 x 50=11.5V
The standard excitation of the E309 is 5V, as used in the calculations above.		

The following table shows the band of transducer full-scale output voltages appropriate to each of the 13 Gain Range Settings. For example, a transducer with a full-scale output of 11.5V would be correctly set as gain range 2, if the display was to show ±50.00mm (as in the example above).

Gain Range	Lever(s) ON	Equivalent Input Signal Range	Maximum Display
		V rms approx.	Settable
1	1	10 to 20	2000 to 4000
2	1 + 3	10 to 20	4000 to 8000
3	1 + 4	10 to 20	8000 to 16000
4	1 + 5	13 to 20	19999
5	2	6.5 to 13	ű
6	2 + 3	3 to 6.5	ű
7	2 + 4	1.5 to 3	ű
8	2 + 5	0.8 to 1.5	ű
9	None	0.4 to 0.8	ű
10	3	0.2 to 0.4	ű
11	4	0.1 to 0.2	ű
12	5	0.05 to 0.1	ű
13	4 + 5	0.03 to 0.05	"

## Note for Gain Ranges 1 - 4:

The max input signal level should not exceed 20V rms otherwise non-linearity could occur. Ranges 1 - 3 allow lower full scale display values to be used with relatively high input signals. For example, if a F.S. value of 3000 is required for an input signal of 10V:

- (a) Multiply the required F.S. value by 20V/10V e.g.  $3000 \times 2 = 6000$
- (b) Choose a gain range which includes this display value, i.e. range 2 (4000 to 8000).

## **Notes for Gain Ranges 5 - 13:**

For lower input signal levels to give less than the full 19999 display, calculate the required gain range as for example:

To display a full scale input signal of 1.2V rms as 2500: 19999/2500 = 8 Equivalent input for full scale is  $1.2 \times 8 = 9.6$ V, therefore use gain range 5 (6.5 to 13V).

### 4.2 Zero Input Switch

Lever 6 on the 6-lever ZERO switch, when set to ON (down), applies zero signal to the amplifier input (irrespective of transducer connection) to allow true amplifier zero display/output to be set via the ZERO control. This facilitates determining transducer centre-stroke position etc. without disconnection/linking.

## 4.3 Zero Suppression Switch (Coarse Zero)

Levers 1 to 5 of the 6-lever ZERO switch are used to zero the display/output when the range of the zero potentiometer is insufficient. The table below shows the amount and direction of display shift when different levers are switched ON. Note: the amount of shift will vary with the setting of the Gain potentiometer:

Lever(s) ON Display		Shift (approximate) and Direction
1		2500 – 5000
1 + 3	Positive	5000 – 10000
1 + 4	Positive	10000 – 20000
1 + 5		20000
2		2500 – 5000
2 + 3	Mogotivo	5000 – 10000
2 + 4	Negative	10000 – 20000
2 + 5		20000

## 4.4 Output Gain Potentiometer

This allows a small range of adjustment of the analogue output voltage (or current) with respect to the full-scale display reading. The normal setting is for ±10V (or 20mA) to correspond to ±19999 display.

## 4.5 Output 0mA/4mA Potentiometer

This allows a small range of adjustment of the analogue output current for 0-20 or 4-20mA systems. It is normally set so that zero display corresponds to an output current of 4mA.

## 4.6 Display Hold (Connector PL2)

Linking Pin 1 to Pin 7 (COM 0V) via a switch or relay holds the display value. Alternatively, a logic signal may be used; high to run and low to hold.


<u>Timing</u>: Normally the display is updated at a rate of 2½ times/second, or every 400ms. When a HOLD is applied, the A-D converter will continue its full cycle before holding the display.

The display will remain held as long as HOLD is low, but a high pulse of >300ns will initiate a new measurement cycle. If another pulse occurs before the cycle is complete it is ignored.

## 4.7 Display Test (Connector PL2)

Connecting Pin 2 to Pin 7 (COM 0V) via a switch or relay produces a 18888 display. Alternatively, a logic signal may be applied; high for normal operation, low to test.

Fig. 3 Internal control locations

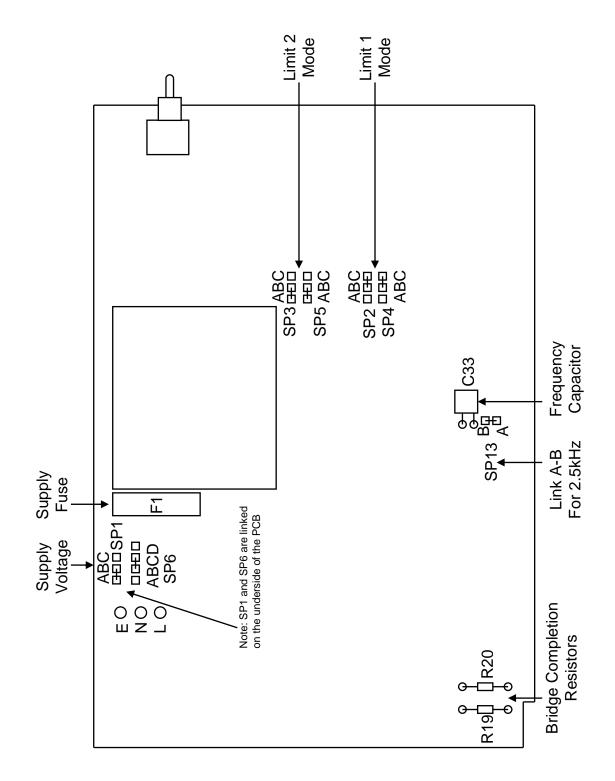

## 5. INTERNAL CONTROLS

Refer to Figure 3 for locations.

## 5.1 Essential precautions prior to opening unit.

These controls are accessible, after <u>FIRST DISCONNECTING THE SUPPLY</u>, by removing 6 screws from the rear panel and sliding the panel, together with the circuit board, rearwards.

## 5.2 Supply Voltage

Solder links are used to select the voltage as shown below:

Supply		If y	
Supply	SP1	SP6	volta
240 (normal)	A – B	B – C	the a
120	B – C	A – B and C – D	to th
			av


If you change the supply voltage setting, ensure that the appropriate label is fitted to the outside of the unit to avoid future confusion.

#### 5.3 Limits Mode

(Refer also to Figure 4)

Solder links are used to select the mode or polarity of each limit, i.e. "high" limit or "low" limit. Units are normally supplied so that:

- (a) the relay of Limit 1 is normally energised until the transducer signal becomes more <u>positive</u> than the set point value, i.e. it operates in a fail-safe <u>high</u> limit mode.
- (b) the relay of Limit 2 is normally energised until the transducer signal becomes more <u>negative</u> than the set point value, i.e. it operates in a fail-safe <u>low</u> limit mode.

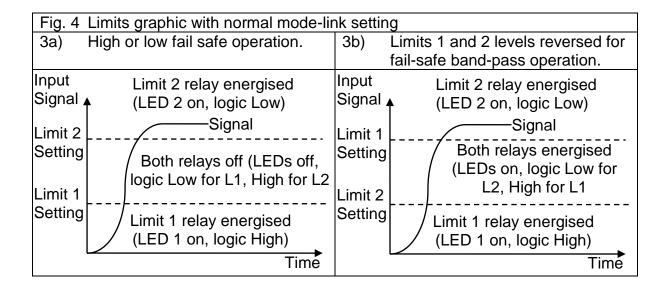

The operating mode of each limit may be selected via the solder pads as shown below:

Limit	Links	Fail-Safe High	Fail-Safe Low
L1	SP2 + SP4	B – C (normal)	A – B
L2	SP3 + SP5	B – C	A – B (normal)

Note 1	Two links must be changed per limit each time, e.g. to change L1 mode, change both SP2 and SP4.
Note 2	In all modes, when a relay is energised, the corresponding LED is lit.
Note 3:	The arrangement of the "normal" links allows use of a fail-safe pass-band
	between the two limit settings.
Logic	The limits logic outputs are <u>low</u> (0) when the signal is more <u>positive</u> than the
Outputs:	limit value and high (1) when the signal is more negative than the limit value.
	The logic is not affected by the reversing links SP2 - SP5 which operate only
	on the relays and LEDs.

## 5.4 Frequency

On units up to Mod 20E the excitation frequency can be changed from 5 kHz to 2.5 kHz by fitting solder link SP13. From Mod 21 onwards the facility is not available.

Excitation frequencies off 1 to 10 kHz are possible if stated when ordering.

### 6. SETTING-UP PROCEDURE

## 6.1 Factory-Calibrated Systems

When a transducer/monitor system has been calibrated at RDP, no setting-up is required. Connect the transducer to the rear-panel socket, switch on power and the display indicates the transducer output directly in engineering units. In case of problems:

- (a) Check transducer wires are not broken.
- (b) Check correct rear panel switch levers are set to ON.

## 6.2 Bipolar calibration (e.g. ±5.000mm display)

- **6.2.1** Connect the transducer, analogue output (if required) and relay output (if required) as detailed in Section 2. Set all rear panel switch levers to OFF (up).
- **6.2.2** Refer to Sections 4.1 and 4.1.1 to determine which GAIN levers to set to ON.
- **6.2.3** Set ZERO Input lever to ON (to zero the amplifier input signal) and adjust FINE ZERO for zero display.
- **6.2.4** Set ZERO Input to OFF and adjust the transducer (armature) for zero display. This determines the transducer centre-stroke position.
- **6.2.5** Move the armature to the positive full-scale position and adjust FINE GAIN for the correct display. (Note: the secondary or primary wires may be reversed to reverse the output polarity.)
- **6.2.6** Re-check the zero position then move the armature to the negative full-scale position. Check the display is correct.

The analogue output rear panel controls may be set simultaneously with steps 4 and 5.

## 6.3 Unipolar calibration (e.g. 0 to 10.000mm display)

Proceed as for half-stroke operation through steps 6.2.1 to 6.2.4 to determine the transducer centre-stroke position and then:

- **6.3.1** Move the armature to the position where zero display/output is required and use the gain controls to display the distance moved, e.g. if a final display of 0 to 80.00mm is required, move the armature inwards by 40mm and set the gain controls for a display of -40.00.
- **6.3.2** Refer to section 4.3 and use the Coarse Zero Switch and Fine Zero to set this display to zero, e.g. for -40.00 use lever 1 and Fine Zero.
- **6.3.3** Move the armature to the full scale position and check the display is correct, e.g. move to the +40mm position and check for 80.00 display.

Re-trim Fine Gain and Zero if necessary for consistent results.

If, for any reason, the coarse gain is changed, the whole procedure will need to be restarted.

### 6.4 High Temperature LIN Transducers

Proceed as in section 6.2 but, in section 6.2.3, instead of setting the zero input switch ON, remove the armature completely from the transducer and then set the display to zero.

Similarly, in section 6.2.4, instead of setting the switch to OFF, replace the armature and adjust it for zero display.

# 7. SPECIFICATION

7.1 Display		
Display size	11mm (0.43in) 7-segmen high brightness red LED	
Range	±19999	
Polarity Indicator	"-" sign displayed	
Overrange	Flashing display	
Decimal Points	4 positions via selector switch	
Hold and Lamp Test	Via rear terminal connections to common or TTL level	
·	signals	
Sample Rate	400ms	
7.2 Power Supply		
Voltage	240V ac standard or 120V ac selected via solder links	
	+10/-20%. 50/60Hz	
Power	10VA typical	
Fuse	250mA/s 20mm	
7.3 General		
Operating Temperature	0°C to 55°C	
Storage	-40°C to 85°C	
Weight	1.3kg/2.9lb	
7.4 Case		
Material	Black anodised aluminum	
Bezel Size	144 x 72mm overall	
Depth	190mm (behind bezel, excluding connectors)	
Panel cut-out	139 x 67mm	
7.5 Amplifier		
Input Range	50mV to 20V via potentiometer and Gain Range switch	
Input Resistance	100kΩ	
Linearity	±0.1% F.S. typical	
Zero Stability	0.003% FS/°C typical (display):	
	0.01% (analogue output)	
Gain Stability	0.003% FS/°C typical (display):	
	0.01% (analogue output) Optimum at ± full scale	
Bandwidth	300Hz (flat)	
Noise p-p	5mV/10µA typical	
CMRR	120dB typical	
Output Voltage	±10V at 5mA	
Output Current	0 or 4-20mA into 0 to 500 ohms. This is an active output	
	that should not be connected to any external power	
	supply as this will damage unit.	
Protection	Short-circuit proof	
Note: Outputs normally factory-set so that ±19999 display corresponds to ±10V and 0 to		
+19999 display to 4-20mA		
7.6 Excitation		
Voltage	5V rms., 100mA max. Short-circuit proof.	
Frequency	5kHz, ±5%:	
	1kHz-10kHz is possible if stated when ordering	

7.7 Controls		
Coarse Zero Adjustment	±FS via 5-lever switch	
Range		
Fine Zero Adjustment Range	±2000 to ±5000 digits according to Fine Gain setting	
Analogue Output	Zero potentiometer range 0 to 10mA (for zero display).	
	Gain potentiometer allows setting 10V output for displays	
	between 2400 and 19999	
7.8 Limits	(Refer also to Application Note, Section 8)	
Set point range	±19999 via 20-turn potentiometer	
Display	3-way switch for Limit 1/Normal/Limit 2 levels	
Indication	2 LEDs on when relays on	
Mode	Positive or negative going operation selected via solder	
	links	
Relays	2 changeover contact types. 0.3A at 120V ac/1A at 24V	
	dc.	
Operating time	5mS	
Mechanical life	>12 x 10 <sup>6</sup> operations	
Accuracy	±0.1% of full scale typical	
Hysteresis	±0.05% of full scale typical	
Logic Outputs	TTL Source 2mA, sink 10mA	
7.9 Connectors		
Transducer/Analogue Output	7-pin DIN shielded. Case grounded by socket	
Limits Output	9-pin DIN type. Case grounded by rear panel. For max. V and I, see 7.8	

## 8. APPLICATION NOTES

#### 8.1 Electrical Interference Problems

When an E308 Transducer Indicator is used in an industrial application, some of the following points may be helpful to System Engineers to design a trouble-free installation.

- 8.11 In general the operation of electronic instruments and transducers can be affected by electrical interference.
- 8.12 This interference can be generated by the switching of large or reactive loads on the supply, causing the production of large voltage spikes and/or variation in the ac mains supply.
  - Higher frequency interference (radio frequency) is often generated by a large voltage (e.g. back e.m.f. from a coil) being switched by a contact. Generally a contact seen to arc whilst switching is producing RF interference.
- 8.13 The interference "signals" can enter a transducer measuring system in the following ways:
- a) Direct pick-up by wiring to the instrument. The wiring can be a connection to the transducer supply input or control (e.g. trip relay).
- b) Direct pick-up into the instrument.
- c) Along the mains supply lines.
- 8.14 There are two methods of countering these problems:
- a) Suppress the interference generation at source.
- b) Prevent the interference gaining access to the instrumentation circuitry.
- 8.15 Suppression at source is often the best approach. AC coils can often effectively be suppressed by means of connecting, as close to the coil terminals as possible, a 100 ohm resistor in series with 0.1µF across the coil. Proprietary transient voltage clippers either non-linear resistor or better semiconductor types are very useful for suppression, mounted across coils and contacts.
- 8.16 An electrically noisy mains supply can be suppressed by means of a mains filter unit. These units in their simplest form consist of capacitors and inductors.


  Mounted at the point where the mains enters the instrument, they can be most effective. A constant voltage transformer is another effective way of cleaning up the mains.
- 8.17 Extra shielding of the transducer, cabling and instrument is a simple, low cost method of preventing particularly directed radiated RF type of interference.

Shielded cable should always be used to connect the transducer to the instrument. Shielded cable is often beneficial for other connections as well. The shield should only be earthed at the instrument end.

It is not good practice to mount the instrument near to contactors, motors, switch transformers, solenoids, etc. But where it is considered necessary to mount the instrument near to such devices, an extra steel enclosure around the instrument would be essential.

In extreme cases, the transducer cable should be run in a steel conduit.

8.18 Trip relays fitted inside the E308 should never be used to switch ac coils. The recommended arrangement is to use a dc slave relay as shown below.

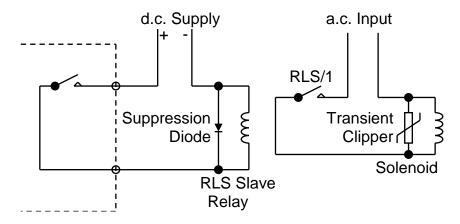

Wherever possible, TTL limit outputs should be used to:

- a) reduce noise problems,
- b) increase response speed,
- c) increase life especially in repetitive applications where relay contact life may be significant.

### 8.2 Bench/portable instrument

The bench instrument (BI) version of the E309 instrument is a standard E309 mounted in an additional case incorporating the following features:

- (a) extra physical protection
- (b) carrying handle
- (c) front panel dial-type ZERO control.

The standard E309 Technical Manual is applicable except that the overall dimensions of the BI case are:

Height 94mm Width 216mm Depth 235mm

and the weight is 2.1kg (4.6lb).